RR480 Branch Logger
Owner's Manual



Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca

Open the crate and remove all loose parts inside.





Lift the machine out of the crate. There are 2 threaded holes at the top of the machine for this purpose. 2 hook eyes are included.













Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca

Remove the battery cover and connect the battery cables.

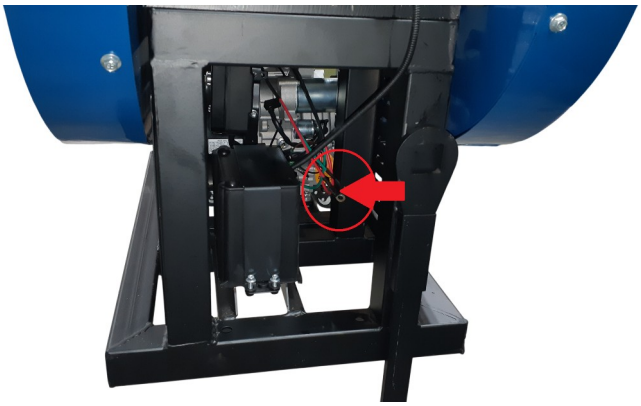

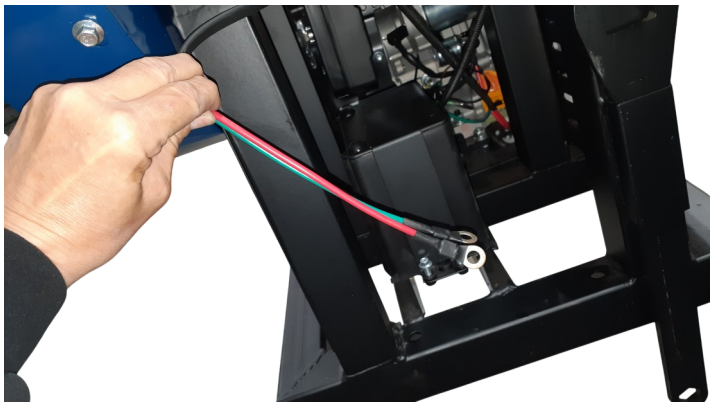

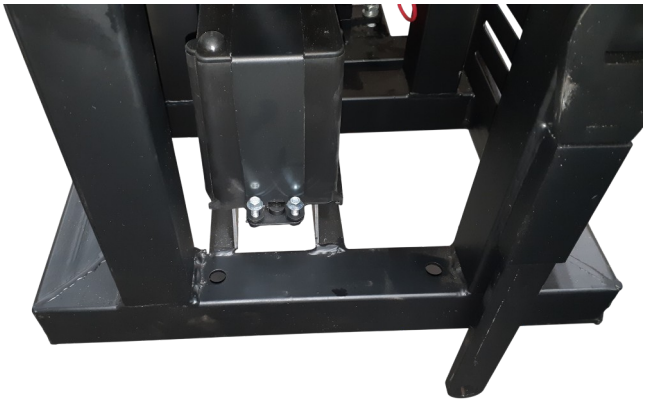

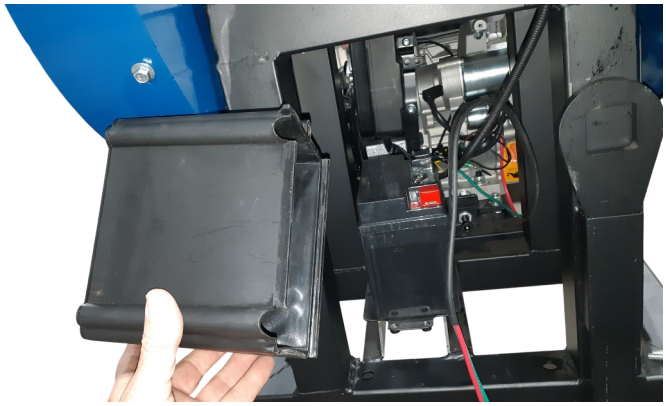

Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca

Install the axle.





Install the wheels and dust caps.










Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca

Install the front wheels.





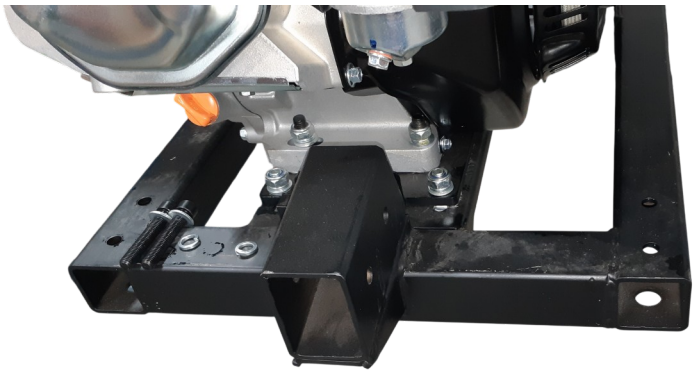




Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca

Install the Infeed.



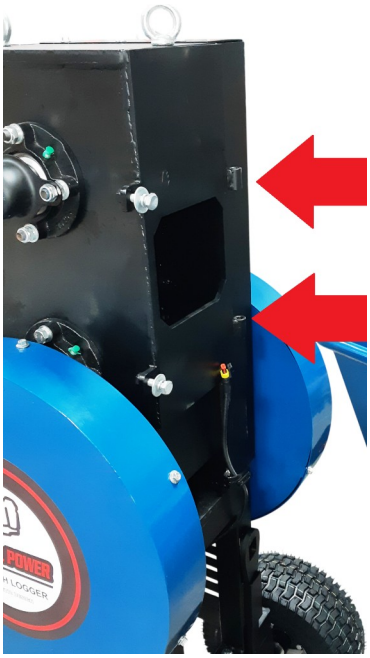





Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca

Install the infeed extension.











Connect the emergency stop cable on the infeed to the cable from the machine.

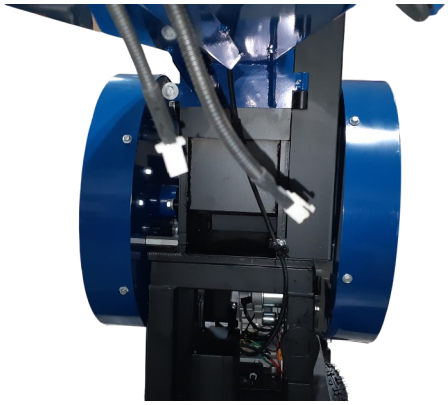

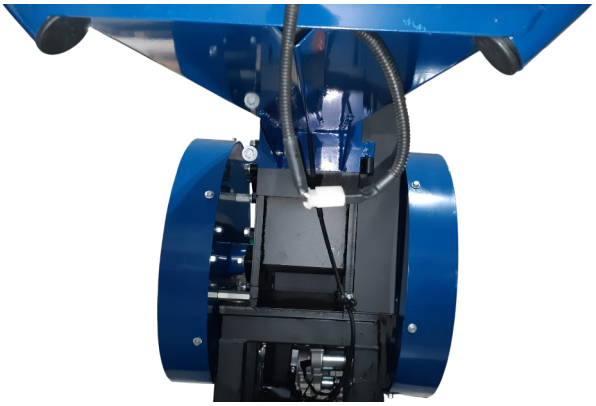

Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca

The small bag contains the screws and hooks used to secure the bags for catching the wood. Install them.









Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca

Ensure wheels are torqued and that the tire pressure matches the manufacturer's recommended pressure indicated on the tire.

Add engine oil to engine until reading full on the dipstick – if the engine is equipped with an oil filter, be sure to crank the engine over(without starting) about 5-10 times to ensure the oil filter is filled and you get an accurate reading on the dipstick.

Add fuel to the engine.

Run the machine at low idle speed to ensure there are no leaks.

Test all functions at low engine speed before the unit is put to work.

Range Road Enterprises Ltd
Box 5 Site 9 RR1
Lacombe, AB T4L2N1
www.range-road.ca