


- 1.) Unpack axle ssembly and frame support brackets.
- 2.) Mount the 2 frame support bracket to the axle, do not tighten the 4 bolts.

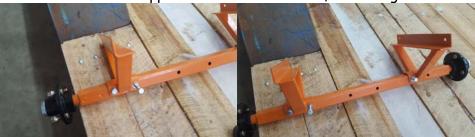

3.) Position box so it is safely sitting on one end.



4.) Hold axle and mounts in position and put bolts through the mounts and frame. Tighten all 8 bolts.



5.) Mount Atv wheel sand tighten nuts.



6.) Repeat for the other axle



7.) Mount 2 hitch pivot brackets to holes on frame and axle, do not tighten.



8.) Put hitch arm into place, install nut & bolt, tighten nut until bolt sits in plastic lock, tighten bolts on pivot brackets.



9.) Lock latch from hitch arm to trailer tub.



10.) Pull trailer over so it is resting on the tires.



11.) Install swivel coupler in either raised or lower position.




12.) Tighten mounting bolts, tighten coupler bolts and grease rotator.



13.) Remove all cardboard and tape from trailer.



14.) Unpack trailer tub doors.

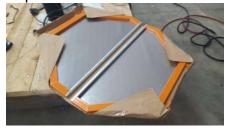

15.) Slide door pins into tubes on trailer.



16.) Adjust latches to hold door firm, to tight and the latch will bent the ear.



17.) Repeat for 2nd door.



18.) Unpack side rails & remove bolts.



19.) Mount side rails and tighten bolts.

